

Retro Fighters USB Wireless Updater Instructions

1. Plug in the USB dongle to a Windows based PC (no need to connect your gamepad to dongle)
2. Give the computer about 20 seconds to recognize the dongle
3. Open the USB updater program
4. The program should recognize the USB dongle and "Update Mode" should now be highlighted
5. Click on "Update Mode"
6. Follow the prompts
7. Next click on "Update Firmware"
8. Once done updating, remove the USB dongle, it's now ready for use on Switch

If you are having issues getting the USB dongle updated refer to troubleshooting section Switch Setup

1. Plug in USB dongle
2. Make sure that "Pro Wired Communication" is turned to "On" in the system settings, otherwise the Switch will not recognize the dongle/gamepad
3. Press the "START" button on gamepad to have it connect to dongle
4. You may have to setup the gamepad in the system settings / change grip order

To enter NSO mode on Switch press START + A for 5 full seconds, this will make the C-buttons work properly now.

Troubleshooting

If you are having issues with updating on PC and the USB updater is not recognizing your dongle, please try the following:

1. Unplug the USB dongle if its currently connected to the computer and set aside
2. Restart the computer
3. IMPORTANT: Immediately on startup open the USB Updater Program (You can put USB updater on desktop so you can immediately open when the computer starts up)
4. Immediately plug USB Updater program
5. Follow the prompts in USB Updater program (i.e. click on Update Mode)

If you need additional help, please contact support@retrofighters.com and a team member will provide assistance.