


RETRO[®]
FIGHTERS

brawler64

wireless gamepad

Quick Start
Instruction Manual



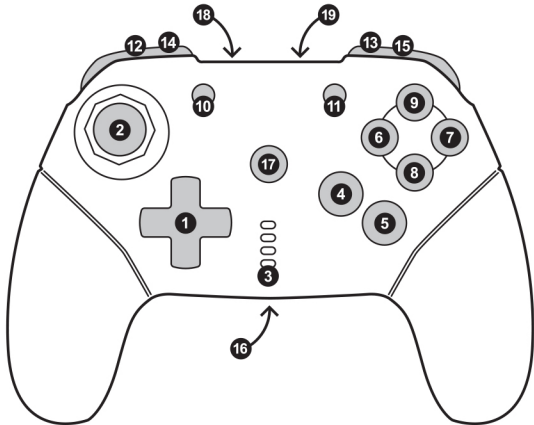

- 1 D-Pad
- 2 Analog Stick
- 3 LED Indicator
- 4 B Button
- 5 A Button
- 6 C Left
- 7 C Right

- 8 C Down
- 9 C Up
- 10 "-" Button
- 11 Home Button
- 12 L Shoulder Button
- 13 R Shoulder Button
- 14 Z Button (Left)

- 15 Z Button (Right)
- 16 Pairing Button (Back)
- 17 Start / "+" Button
- 18 Screen Shot (Top L)
- 19 Swapping Button (Top R)

how to pair

1. Make sure that “Pro Wired Communication” is turned to “OFF” in system settings.
2. Go to “Change Grip/Order” page in your switch settings.
3. Press the back pairing button for at least 3 seconds until LEDs flash quickly.
4. Switch will connect to the gamepad automatically.

powering off

Press back button to turn off your gamepad.

Xinput to Dinput mode

To switch between Xinput and Dinput mode, press the back pairing button + “B” at the same time, hold until the top and bottom LEDs are lit.


gamepad reset

Press and hold the “HOME” button lasting at least 10 seconds to reset the gamepad.

Vibration Motor power adjustment

To INCREASE the rumble power press "+" and analog stick UP to increase
To DECREASE the rumble power press "-" and analog stick DOWN to decrease
Range: 0%-30%-70%-100%

LED indicators

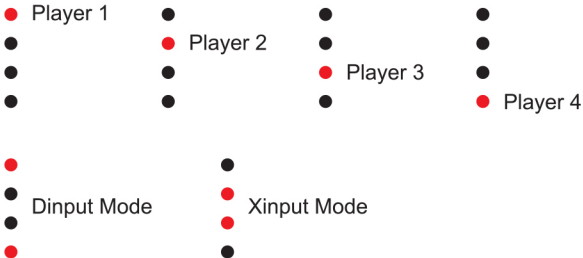

macros

Dinput to XInput mode

"B" button + Back pairing button, hold until top and bottom LEDs are lit (on PC)

Turn off LEDs

A+B+START

ZL/ZR Button Swap *(switches the ZL with ZR functionality and ZR with ZL)*

B+START+ZL

(Controller will rumble indicating the macro is activated)

FAQs

Why aren't my C-buttons working?

ou are in Pro Controller mode; you need to be in N64 mode. This controller is capable of both Pro controller layout and N64 layout. To see which controller mode you are currently in go to "Change Grip/Order" in the switch settings and it will either display an N64 controller or Pro Controller. To change from one or the other, simply press the top swap button (two arrows).

How long is the battery life?

Approximately 10 hours before you need to recharge.

What systems are compatible?

The gamepad is compatible with Switch and PC.

FAQs

How do I charge?

Use the provided USB-C cable with a USB compatible charging block (not included). Once charging the LED light on the controller will continuously blink indicating it is currently charging. Once the controller is fully charged it will stop blinking. This process takes approximately 2.5 hours on low / empty battery.

How do I make it work on PC?

Connect your USB-C cable directly to your PC, it connects via wired connection.

What is the default button layout?

The default button layout is the button layout for NSO. To switch to "Pro Controller" layout simply press the Swap button.

How do I awaken my Switch system?

Simply press the Home button to awaken your Switch system and reconnect.

customer service

We strive to make our fellow gamers happy. If you experience any issues with this product please contact us directly. We are here to help and we will make it right! You can send us an email at: support@retrofighters.com

notes

social media

for use with
Switch[®]
Switch Online/PC

Be sure to follow us for the latest news and product releases.



retrofighters



retrofightersco



retro.fighters



retrofighters

Tag **#retrofighters** for a chance
to be featured on our social media!