

8

social media

for use with
PlayStation®
PS4 • PC

Be sure to follow us for the latest news and product releases.

retrofighters

retrofightersco

retro.fighters

retrofighters

Tag #retrofighters for a chance to be featured on our social media!

RETRO FIGHTERS

MANTIS
wireless gamepad

Quick Start
Instruction Manual

1



2



2.5 hours of charging
10 hrs. of gaming!

1 D-pad

2 Left Analog Stick

3 Right Analog Stick

4 LED Indicators

5 Touch pad

6 Square Button

7 X button

8 Triangle button

9 Circle button

10 Home button

11 P1 (back) button

12 P2 (back) button

13 L1 button

14 R1 button

15 L2 button

16 R2 button

17 PS4/PC swap

18 Trigger stops (back)

19 Share button

20 Options

21 L small button (reset)

22 R small button (program)

23 Speaker

notes

7

6

customer service

We strive to make our fellow gamers happy. If you experience any issues with this product please contact us directly. We are here to help and we will make it right! You can send us an email at: support@retrofighters.com

how to pair

PS4: Press Home button for 2 seconds (lights flash BLUE to indicate pairing mode)
First time pairing on PS4? Please use USB-C to connect to system before pairing.

ANDROID: Press "O"+"HOME" button for 2 seconds (lights flash GREEN to indicate pairing mode)

XBOX (PC Bluetooth): Press "Square" + "Home" button for 2 seconds (lights flash RED to indicate pairing mode)

NOTE: Only PS4 mode supports motion sensor, speaker & touchpad capabilities

programming buttons

Enter programming mode by pressing the top right small P button + P1 or P2 button on back simultaneously. LED light turns purple and will start to flash, motors will rumble one time, meaning the device has entered program mode.

Press any button you would like to set to be P1 or P2. You can set up to 42 combinations per button at one time. More than 42 times the mode will exist.

Press P1 or P2 again to finish program process and motors will rumble one time to exit program mode. Lights will turn back to normal when you exit program mode.

To clear P1/P2 press the top right small P button + P1 or P2 on back simultaneously to re-enter programming mode. Press P1 or P2 to clear the button completely.

3

4

Xinput to Dinput mode

On PC, Mantis defaults to Xinput. To change, use back swapping button.

LED indicator

Low power: White light will flash slowly.

No power / need to charge: Gamepad will shut off automatically.

During charging: White light will keep flashing when charging and will stay lit when charged fully.

gamepad reset

Press the top left power button to reset (power off) your gamepad

reconnect

When gamepad is in OFF status, press the PS Home button for 5 seconds. Gamepad will reconnect to last device.

power off

Press top right Power button to power off.

wired mode

On PS4, gamepad recognizes as PS4 mode.

On PC, gamepad defaults to Xinput mode (red lights). Change switch on back of controller to switch to Dinput (green lights). When swapping modes, the motors will rumble one time.

Please use USB-C to connect to system before pairing.

joystick calibration

(Not needed normally, only if there is an issue with sticks, use to recalibrate)

Gamepad in OFF status, Press X+SHARE+HOME buttons for 3 seconds until RED RGB light turns on to indicate calibration mode.

Rotate left and right stick joystick 3 times each with uniform speed and press three times left and right triggers.

Press OPTIONS to exit joystick calibration mode, then gamepad will turn off

5